






Afford A Wall Assembly Guide




YOU WILL NEED

IN THE BOX	QUANTITY	ADDITIONAL TOOLS		
Main 3-Panel Section	1			
Wheel Bases	2	WHEEL BASES	ALLEN KEY	SHIFTER Not provided
Allen Key	1			

Step 1: Remove bolts and screws

For each bottom corner of the Main Panels, remove both bolts with the help of a shifter (not provided) and both screws with the allen key provided.

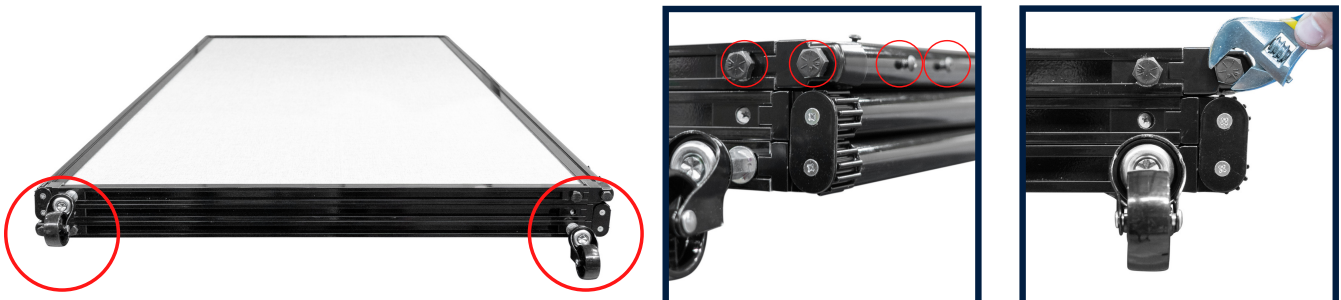

Step 2: Insert Wheel Bases

For each side, attach a wheel base by inserting the two screws through the side bracket of the wheel base and tighten with the included Allen key at 90%



Then, insert the bolts through the bottom bracket and tighten with the shifter. Finish tightening the side screws to lock the wheel base into place. Repeat for the other side.

